


**PUMADEQ™ SYSTEM WATERPROOFING ASSEMBLY
WITH AN UNREINFORCED FIELD MEMBRANE
SEQUENCE OF INSTALLATION**

- ① DECK/SUBSTRATE AS SPECIFIED
- ② **PUMADEQ™ PRIMER 20** OR **HENRY® GC PRIMER**
- ③ UNREINFORCED PUMA FIELD MEMBRANE:
3A - **PUMADEQ™ FLEX 30SL** (GRAY - 50 MILS)
3B - **PUMADEQ™ FLEX 30SL** (WHITE - 30 MILS)
- ④ COLOR STABLE TOP COAT:
4A - **HENRY® DEQCOAT™ 50** (20 MILS)
4B - **HENRY® DEQCOAT™ 50** (12 MILS)

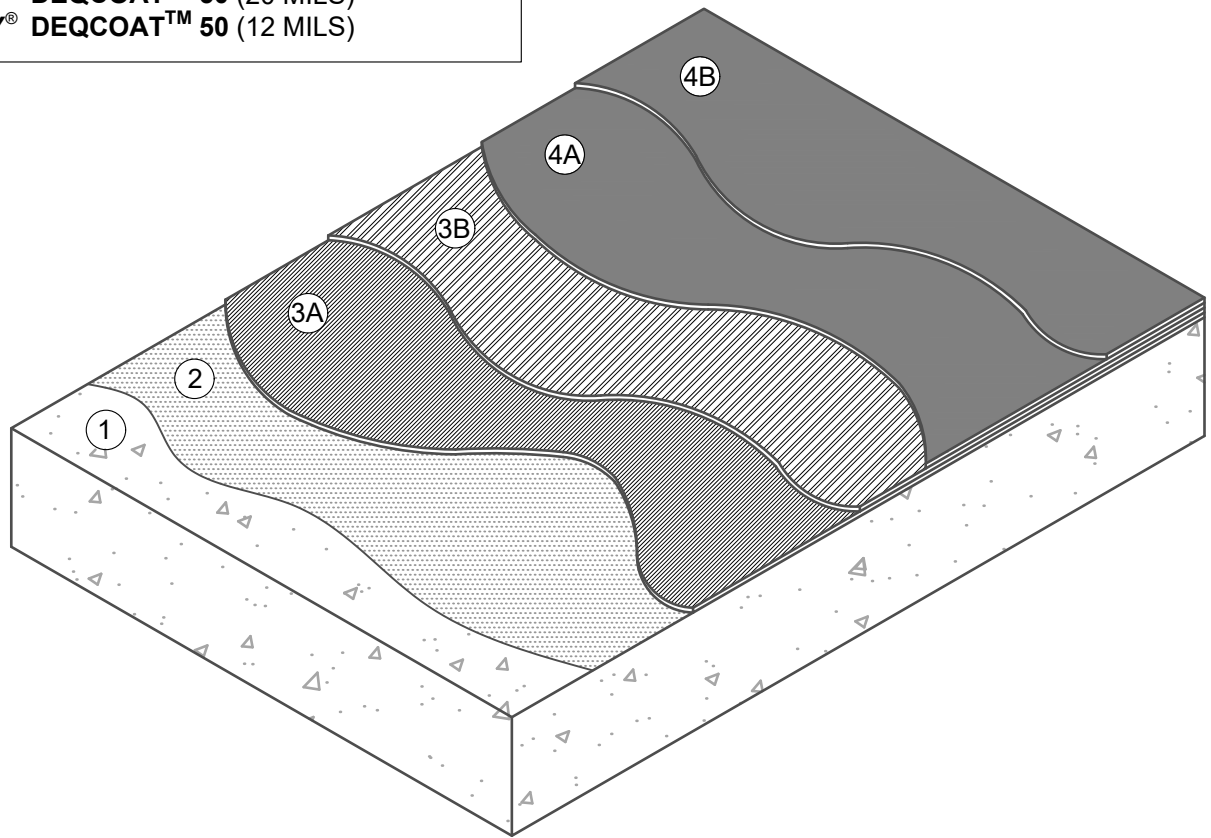

NOTES:

1. DETAIL SHOWS HENRY® **PUMADEQ™** SYSTEM WATERPROOFING ASSEMBLY WITH AN UNREINFORCED FIELD MEMBRANE. SUBSTRATE SHOWN IS FOR REFERENCE ONLY. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR AUTHORIZED SUBSTRATES.
2. SURFACE PROFILES MUST MEET ICRI CSP 3-4. IF CSP 5, REFER TO REINFORCED **PUMADEQ™** SYSTEM DETAILS.
3. PREPARE AND PRIME VERTICAL SUBSTRATES A MINIMUM 2" BEYOND **PUMADEQ™** SYSTEM APPLICATION IN ACCORDANCE WITH HENRY® **PUMADEQ™** SYSTEM SUBSTRATE PREPARATION GUIDELINES TECH-TALK BULLETIN.
4. DO NOT INSTALL **PUMADEQ™** SYSTEM BEYOND PRIMED SURFACES.
5. HENRY® OFFERS PAVERS, RIGID INSULATION, AND PREFABRICATED DRAINAGE COMPOSITES AS A SINGLE SOURCE WARRANTY OPTION PER PROJECT SPECIFIC REQUIREMENTS (NOT SHOWN FOR CLARITY). CONTACT HENRY® FOR SYSTEM CONFIGURATIONS AND WARRANTY OPTIONS.
6. REFER TO **PUMADEQ™** SYSTEM GUIDE SPECIFICATION FOR RECOMMENDED INSTALLATION PROCEDURES.

Henry®

999 N. Pacific Coast Highway, Suite 800
El Segundo, CA 90245
800-486-1278 • www.henry.com

MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY® DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

PUMADEQ™ SYSTEM - WATERPROOFING ASSEMBLY

SYSTEM DETAIL

**UNREINFORCED FIELD MEMBRANE
SURFACE PROFILES CSP3-4 WITH TOP COAT**

SCALE: N.T.S.

04-26-2019

PUMADEQ-WF