


Precast Joint Detail

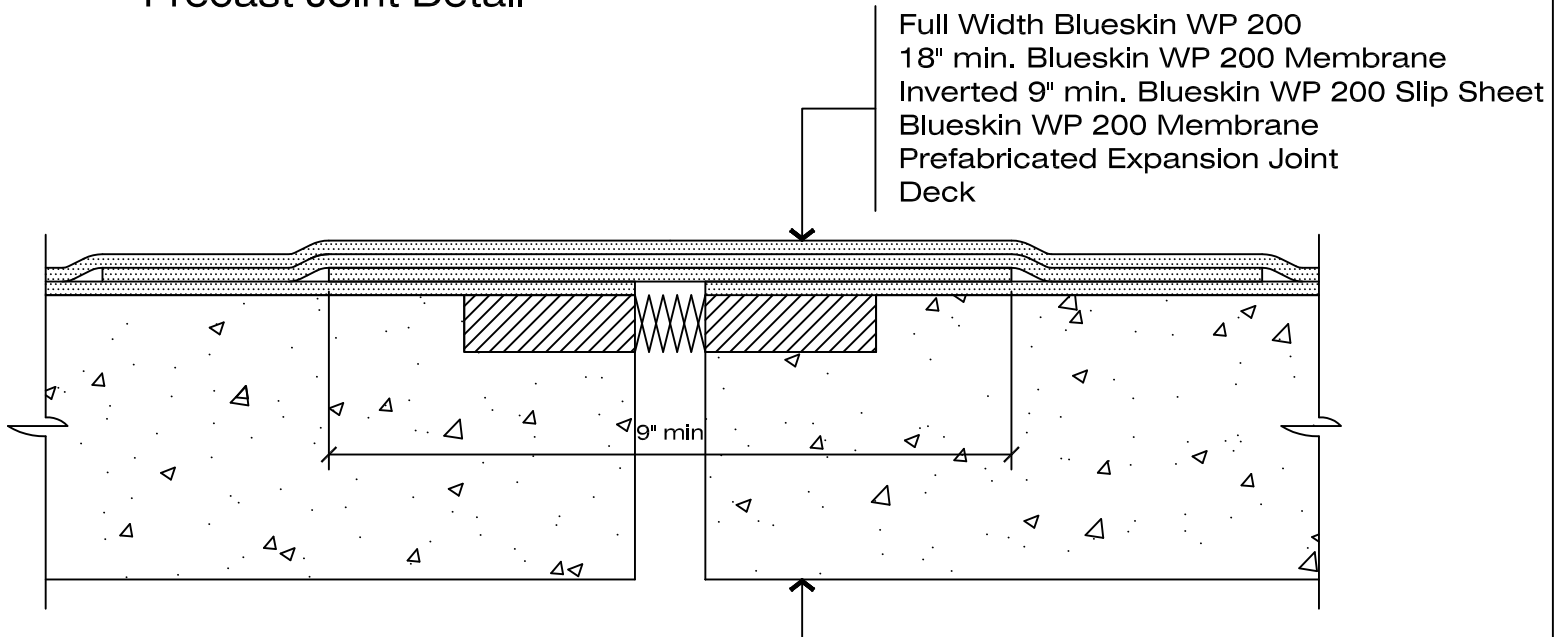

Expansion Joint

Notes

1. Provide a night-seal application of HE925 sealant or Polybitume 570-05 to reinforce membrane terminations if not covered on the same day by field membrane.
2. End joints of precast units should be reinforced with a 12" wide strip of Blueskin WP 200.



BLUESKIN WP-200

SCALE: N.T.S.

SELF-ADHERED WATERPROOFING SYSTEM

PRECAST/EXPANS.
JOINT DETAIL

ES-H109